

USER MANUAL

CONTENTS

GROUNDING INSTRUCTIONS	3
IMPORTANT SAFETY INSTRUCTIONS	4
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	7
PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	8
Microwave safety	9
The advantages of microwaves	13
Description of your oven	14
Basic controls	16
Special functions.....	23
When the oven is working.....	26
Defrosting.....	27
Cooking with the microwave oven	28
Cooking with the grill.....	30
Roasting and baking	32
What kind of ovenware can be used?	34
Oven Cleaning and Maintenance	36
What should I do if the oven doesn't work?	38
Technical Characteristics.....	39
Installation instructions	39
Installation.....	43

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website to:

Get usage advice, brochures, trouble shooter, service information:

www.aeg-appliances.ca

Register your product for better service:

www.aeg-appliances.ca/warranty-card/

Buy Accessories, Consumables and Original spare parts for your appliance:

www.euro-parts.ca

CUSTOMER CARE AND SERVICE


We recommend the use of original spare parts.

When contacting Service, ensure that you have the following data available.

The information can be found on the rating plate. Model, PNC, Serial Number.

 Warning / Caution-Safety information.

 General information and tips.

 Environmental information.

Subject to change without notice.

1. GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Warning! IMPROPER USE OF THE GROUNDING CAN RESULT IN A RISK OF ELECTRICAL SHOCK.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

When heating food in plastic or paper containers, keep an eye on the appliance due to the possibility of ignition.

The appliance is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

Warning! To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

- Read all instructions before using the appliance.
- Read and follow the specific “**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**” found on this manual.
- This appliance must be grounded. Connect only to properly grounded outlet. See “**GROUNDING INSTRUCTIONS**” found on this manual.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Some products such as whole eggs and sealed containers – for example, closed glass jars are able to explode and should not be heated in this oven.
- Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.

- As with any appliance, close supervision is necessary when used by children.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
- Do not cover or block any openings on the appliances.
- Do not store this appliance outdoors. Do not use this product near water – for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
- Do not immerse cord or plug in water.
- Keep cord away from heated surfaces.
- Do not let cord hang over edge of table or counter.
- When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.

To reduce the risk of fire in the oven cavity:

- Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
- Remove wire twist-ties from paper or plastic bags before placing bag in oven.
- If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
- Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- Liquids such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL INTO THE LIQUID.



To avoid that type of situation when heating liquids, put a teaspoon or glass rod inside the container.

3. PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open – door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

Pacemakers:

Most pacemakers are shielded from interference from electronic products, including microwaves. However, patients with pacemakers may wish to consult their physicians if they have concerns.

4. PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not operate or allow the oven to be operated with the door open.
- (b) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary: interlock operation, proper door closing, seal and sealing surfaces (arcing, wear, and other damage), damage to or loosening of hinges and latches, evidence of dropping or abuse).
- (c) Before turning on microwave power for any service test or inspection within the microwave generating compartment, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity and connection.
- (d) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems, shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
- (e) A microwave leakage check, to verify compliance with the Federal Performance Standard, should be performed on each oven prior to release to the owner.

5.MICROWAVE SAFETY



- **Warning!** Never leave the oven unwatched, especially when using paper, plastic or other combustible materials. These materials can char and may fire. FIRE RISK!
- **Warning!** Do not heat pure alcohol or alcoholic drinks in the microwave. FIRE RISK!
- **Warning!** Do not heat liquids or other foods in closed containers since these may explode readily.
- **Warning!** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Warning!** If the oven has a combined function mode (microwave with other means of heating), children should not be allowed to use the oven without adult supervision on

account of the high temperatures generated.

- **Warning!** The oven cannot be used if:
 - The door is not closed correctly;
 - The door hinges are damaged;
 - The surfaces of the contact between the door and the oven front are damaged;
 - The door window glass is damaged;
 - There is frequent electrical arcing inside the oven even though there is no metal object inside.

The oven **can only be used again** after it has been repaired by a Technical Assistance Service technician.

Beware!

- Never heat baby foods or drinks in bottles or jars with the teats or lids on them. After heating the food mix or shake well so that the heat is spread evenly. Check the food temperature before feeding this to the child. DANGER OF BURNING!

- To avoid food overheating or burning it is very important not to select long time periods or power levels that are too high when **heating small quantities of food**. For example, a bread roll can burn after 3 minutes if the power selected is too high.
- For toasting, use just the grilling function and watch the oven all the time. If you use a combined function to toast

This oven is exclusively for domestic use!

Use the oven only for preparing meals.

Avoid damaging the oven or other dangerous situations by following these instructions:

- Do not switch on the oven without the **turntable support**, the **turntable ring** and the respective **plate** being in place.
- **Never switch on the microwave when it is empty**. If there is no food inside there may be an electrical overcharge and the oven could be damaged. **RISK OF DAMAGE!**

bread it will catch fire in a very short time.

- Make sure you never catch the power cables of other electrical appliances in the hot door or the oven. The cable insulation may melt. **Danger of short-circuiting!**

- **For carrying out oven programming tests** put a glass of water inside the oven. The water will absorb the microwaves and the oven will not be damaged.
- Use only **dishes suitable for microwaves**. **Before using dishes and containers** in the microwave, check that these are suitable (see the section on types of dishes).
- **Never remove the mica cover on the ceiling of the oven interior!** This cover stops fat and pieces of food damaging the microwave generator.
- Do not keep any **flammable object** inside the oven as it may burn if the oven is switched on.

- Do not use the oven as a **pantry**.
- **Eggs with their shells** and **whole boiled eggs** must not be heated in microwave ovens because they may explode.
- Do not use the oven for **frying** as it is impossible to control the temperature of oil heated by microwaves.
- **To avoid being burnt**, always use oven gloves for handling dishes and containers and touching the oven.
- **Do not lean or sit on the open oven door**. This may damage the oven, especially in the hinge zone. The door can bear a maximum weight of 8 kg.
- The turntable and the grills can bear a maximum load of 8 kg. To avoid damaging the oven, do not exceed this load.

Cleaning:

- **Warning!** Your microwave oven must be cleaned regularly. All food remains must be removed (see section on Oven Cleaning). If the microwave oven is not kept clean its surface may deteriorate **and this may** shorten the oven's working life and could even result in a dangerous situation.
- The door contact surfaces (the front of the cavity and the inside part of the doors) must be kept very clean in order to ensure the oven functions correctly.
- **Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.**
- **Do not use high pressure or stream jet cleaning appliances.**
- Please follow the instructions regarding cleaning in the section "Oven Cleaning and Maintenance".

Repairs:

- **Warning – Microwaves!** **The outer protection of the oven must not be removed.** It is dangerous for anyone not authorized by the manufacturer to carry out any kind of repair or maintenance work.
- If the power cable is damaged it should be

substituted by the manufacturer, authorized agents or technicians qualified for this task in order to avoid dangerous situations. Furthermore, special tools are required for this task.

- Repair and maintenance work, especially of current carrying parts, can only be carried out by technicians authorized by the manufacturer.

6.THE ADVANTAGES OF MICROWAVES

In conventional ovens, heat radiated by electrical elements or gas burners slowly penetrates the food from outside to inside. On account of this there is a major amount of energy is wasted heating the air, the oven components and the food containers. In a microwave oven, heat is generated by the food itself and the heat travels from inside to outside. No heat is lost to the air, the walls of the oven cavity or the dishes and containers (if these are suitable for use in microwave oven), in other words, only the food is heated.

Microwave ovens have the following advantages:

- Shorter cooking times; in general these are up to 3/4 less than the time required for conventional cooking.
- Ultra-fast food defrosting thus reduces the danger of bacterial development.
- Energy savings.
- Conservation of the nutritional value of foods due to the shorter cooking times.
- Easy to clean.

How a microwave oven works?

In a microwave oven there is a high tension valve called a magnetron which converts electrical energy into microwave energy. These electromagnetic waves are channelled to the interior of the oven through a wave guide and distributed by a metallic spreader or through a turntable.

Inside the oven the microwaves propagate in all directions and are

reflected by the metal walls, uniformly penetrating the food.

Why food heats up

Most foods contain water and water molecules vibrate when subjected to microwaves.


The friction between molecules produces heat which raises the temperature of the food, de-freezing it, cooking it or keeping it hot.

Since the heat arises inside the food:

- This can be cooked with little or no liquid or fats/oils;
- De-freezing, heating or cooking in a microwave oven is quicker than in a conventional oven;
- The vitamins, minerals and nutritional substances in the food are conserved;
- The natural colour and aroma of the food are unchanged.

Microwaves pass through china, glass, cardboard or plastic but do not go through metal. For this reason, metal containers or ones with metal parts must not be used in a microwave oven.

Microwaves are reflected by metal...

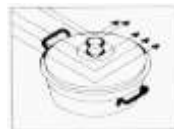


... but go through glass and china...



... and are absorbed by foods.



7. DESCRIPTION OF YOUR OVEN

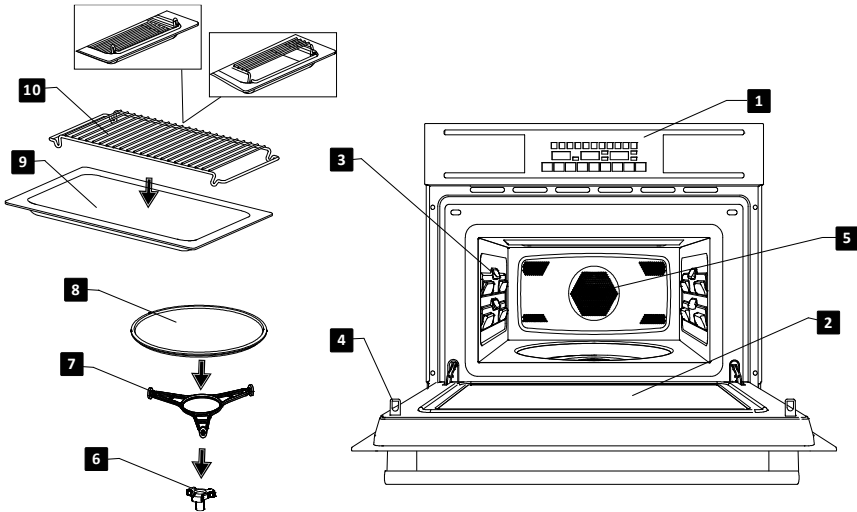

1 Control panel

2 Door window glass

3 Lateral supports

4 Catches

5 Hot Air Output


6 Turntable support

7 Turntable ring

8 Turntable plate

9 Rectangular Glass tray

10 Rectangular Rack

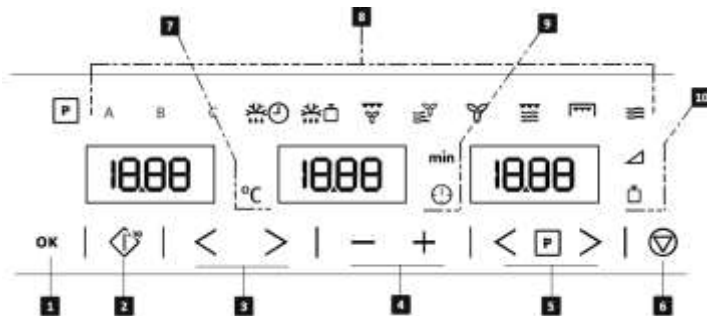

1 Confirmation key (OK)

2 Start / Quick Start key

3 Parameter selection keys

4 Plus and Minus keys

5 Function selection keys

6 Cancel / Safety Block key







 

7 Temperature Light

8 Function Lights

9 Clock/Duration Lights

10 Power/Weight Lights

7.1. Function Description

Symbol	Funktion	Microwave Power Output	Foods
	Microwave	200	Slow defrosting for delicate foods; keeping food hot
		400	Cooking with little heat; boiling rice Rapid defrosting, heating baby food
		600	Heating and cooking food
		800	Cooking vegetables and food Cooking and heating carefully, Heating and cooking small portions of food
		1000	Rapidly heating liquids
	Grill	---	Grilling food
	Microwave + Grill	200	Toasting food
		400	Grilling poultry and meat
		600	Cooking pies and cheese-topped dishes
	Hot-Air	---	Roasting and baking
	Microwaves + Hot-Air	600	Quick meat, fish and poultry roasting. Baking cakes
	Grill + Fan	---	Grilling meat and fish
			Grilling poultry
			Potatoes – deep-frozen, defrosting and roasting
	Defrosting by weight	---	Example: to defrost meat, poultry, fish, fruit and bread quickly.
	Defrosting by time (manual)	---	Example: to defrost meat, poultry, fish, fruit and bread quickly.
A	Special Function A: Heating Food	---	Various types of food
B	Special Function B: Cooking	---	To cook fresh food
C	Special Function C: Defrosting & Toasting	---	Various types of food

8. BASIC CONTROLS

8.1. Setting the clock


The clock display will flash to indicate that the time shown is not correct. To set the clock, proceed as follows:



1. Select the Clock Symbol with the Parameter selection keys (not necessary if your microwave oven is first plugged in or after a power failure) **2**.
2. Set the hours with Plus and Minus keys **4**.
3. Confirm the selection with the Confirmation key **1**.
4. Set the minutes with the Plus and Minus keys **4**.
5. Confirm the selection with the Confirmation key **1**.

8.2 Hiding/Displaying the Clock

If the clock display disturbs you, you can hide it by proceeding as follows:

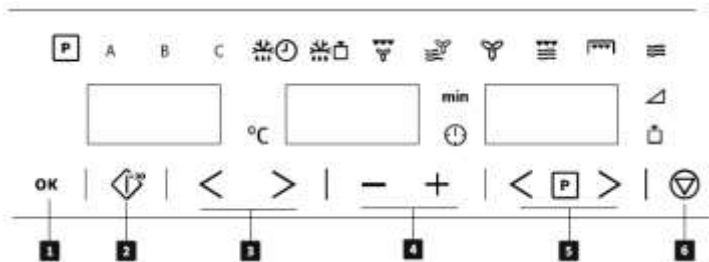

1. Press and hold the Confirmation key **1** for 3 seconds. The clock will be hidden but the dots between the hours and the minutes will flash once per second.
2. To show the clock again, repeat the described procedure again.

8.3. Safety blocking

The oven functioning can be blocked (for example, to stop it being used by children). Proceed as follows:



1. To block the oven, press the Cancel key **6** for 3 seconds. You will hear a sound signal and the clock display will show the word "SAFE". The oven is blocked in this state and cannot be used.
2. To unblock the oven, press the Cancel key **6** again for 3 seconds. You will hear a sound signal and the clock display will show the time again.

8.4. Stopping the rotating plate



1. To stop the rotating plate, press Confirmation **1** and Cancel **6** keys for 3 seconds to get the word "PLAT OFF" in the display.
 2. To start plate rotation again, repeat the above procedure.
- i Note:** Make sure that you press the confirmation key before the cancel key.

8.5. Microwave

Use this function to cook and heat vegetables, potatoes, rice, fish and meat.



1. Select the Microwave function with the Function selection keys **6**.
 2. Select the Power Level with Parameter selection keys **3**. The Power Level symbol and display start blinking. If you do not change the power level the microwave operates with the default power 800 W.
 3. Set the power level with the “+” and “-” keys **4**.
 4. Press the Confirmation key **1** to validate the power level. The display and symbol stop blinking.
 5. Select the Duration with Parameter selection keys **3**. The Duration symbol and display start blinking.
 6. Set the duration with the “+” and “-” keys **4**.
 7. Press the Confirmation key **1** to validate the duration. The display and symbol stop blinking.
 8. Start the cooking process by pressing the Start key **2**.
- i** **NOTE:** When 1000 W power is selected, the duration is limited to a maximum of 15 minutes.

8.6. Microwave oven – Quick Start

Use this function to rapidly heat foods with high water content, such as water, coffee, tea or thin soup.



1. Press the Start key **2**. The microwave oven operates for 30 seconds at maximum power.
 2. If you want to increase the operating time press the Start key **2** again. Each time you press this key the operating time will be increased by 30 seconds.
- i** **NOTE:** When 1000 W power is selected, the duration is limited to a maximum of 15 minutes.

8.7. Grill

Use this function to brown the top of food quickly.



1. Select the Grill function with the Function selection keys **6**.
2. Select the Duration with Parameter selection keys **3**. The Duration symbol and display start blinking.
3. Set the duration with the “+” and “-” keys **4**.
4. Press the Confirmation key **1** to validate the duration. The display and symbol stop blinking.
5. Start the cooking process by pressing the Start key **2**.

8.8. Microwave + Grill

Use this function to cook lasagne, poultry, roast potatoes and toasted foods.



1. Select the Microwave + Grill function with the Function selection keys **6**.
2. Select the Power Level with Parameter selection keys **3**. The Power Level symbol and display start blinking. If you do not change the power level the microwave operates with the default power 600 W.
3. Set the power level with the Plus and Minus keys **4**.
4. Press the Confirmation key **1** to validate the power level. The display and symbol stop blinking.
5. Select the Duration with Parameter selection keys **3**. The Duration symbol and display start blinking.
6. Set the duration with the Plus and Minus keys **4**.
7. Press the Confirmation key **1** to validate the duration. The display and symbol stop blinking.
8. Start the cooking process by pressing the Start key **2**.

8.9. Hot air

Use this function to bake and roast.



1. Select the Hot-Air function with the Function selection keys **5**.
2. Select the Temperature with Parameter selection keys **3**. The Temperature symbol and display start blinking. If you do not change the temperature the oven operates with the default temperature 160°C.
3. Set the temperature with the Plus and Minus keys **4**.
4. Press the Confirmation key **1** to validate the temperature. The display and symbol stop blinking.
5. Select the Duration with Parameter selection keys **3**. The Duration symbol and display start blinking.
6. Set the duration with the Plus and Minus keys **4**.
7. Press the Confirmation key **1** to validate the duration. The display and symbol stop blinking.
8. Start the cooking process by pressing the Start key **2**.

8.10. Microwave + Hot air

Use this function to bake and roast.



1. Select the Hot-Air + Microwaves function with the Function selection keys **5**.
2. Select the Temperature with Parameter selection keys **3**. The Temperature symbol and display start blinking. If you do not change the temperature the oven operates with the default temperature 160°C.
3. Set the temperature with the Plus and Minus keys **4**.
4. Press the Confirmation key **1** to validate the temperature. The display and symbol stop blinking.
5. Select the Power Level with Parameter selection keys **3**. The Power Level symbol and display start blinking. If you do not change the power level the microwave

operates with the default power 600 W.

6. Set the power level with the Plus and Minus keys **4**.
7. Press the Confirmation key **1** to validate the power level. The display and symbol stop blinking.
8. Set the Duration with Parameter selection keys **3**. The Duration symbol and display start blinking.

9. Set the duration with the Plus and Minus keys **4**.

10. Press the Confirmation key **1** to validate the duration. The display and symbol stop blinking.
11. Start the cooking process by pressing the Start key **2**.

8.11. Grill with Fan

Use this function for crispy roast meat, fish, poultry or French fries.



1. Select the Grill with Fan function with the Function selection keys **6**.
2. Select the Temperature with Parameter selection keys **3**. The Temperature symbol and display start blinking. If you do not change the temperature the oven operates with the default temperature 160°C.
3. Set the temperature with the Plus and Minus keys **4**.
4. Press the Confirmation key **1** to validate the temperature. The display and symbol stop blinking.
5. Select the Duration with Parameter selection keys **3**. The Duration symbol and display start blinking.
6. Set the duration with the Plus and Minus keys **4**.
7. Press the Confirmation key **1** to validate the duration. The display and symbol stop blinking.
8. Start the cooking process by pressing the Start key **2**.

8.12. Defrosting by weight (automatic)

Use this function to defrost meat, poultry, fish, fruit and bread quickly.



1. Select the Defrost by Weight function with the Function selection keys **6**.
2. Select the Program with Parameter selection keys **3**. The Duration and Clock symbols and the display start blinking.
3. Set the program with the Plus and Minus keys **4** (refer to the table below).
4. Press the Confirmation key **1** to validate the program. The display and symbols stop blinking.
5. Select the Weight with Parameter selection keys **3**. The Weight symbol and display start blinking.
6. Set the weight with the Plus and Minus keys **4**.
7. Press the Confirmation key **1** to validate the weight. The display and symbol stop blinking.
8. Start the cooking process by pressing the Start key **2**.

The following table shows the defrosting by weight function programmes, indicating weight

intervals, and defrosting and standing times (in order to ensure the food is of a uniform temperature).

Programm	Food	Weight (g)	Time (min.)	Standing time (min.)
Pr 01	Meat	100 – 2000	2 – 43	20 – 30
Pr 02	Poultry	100 – 2500	2 – 58	20 – 30
Pr 03	Fish	100 – 2000	2 – 40	20 – 30
Pr 04	Fruit	100 – 500	2 – 13	10 – 20
Pr 05	Bread	100 – 800	2 – 19	10 – 20



Important Note: see “General instructions for defrosting”.

8.13. Defrosting by time (manual)

Use this function to defrost meat, poultry, fish, fruit and bread quickly.



1. Select the Defrost by Time function with the Function selection keys **6**.
2. Select the Duration with Parameter selection keys **3**. The Duration symbol and display start blinking.
3. Set the duration with the Plus and Minus keys **4**.
4. Press the Confirmation key **1** to validate the duration. The display and symbol stop blinking.
5. Start the cooking process by pressing the Start key **2**.

9. SPECIAL FUNCTIONS

9.1. Special Function A: Heating food

Use this function to heat various types of food.



1. Select the Special function F1 with the Function selection keys **6**.
2. Select the Program with Parameter selection keys **3**. The Duration and Clock symbols and the display start blinking.
3. Set the program with the Plus and Minus keys **4** (refer to the table below).
4. Press the Confirmation key **1** to validate the program. The display and symbols stop blinking.
5. Select the Weight with Parameter selection keys **3**. The Weight symbol and display start blinking.
6. Set the weight with the Plus and Minus keys **4**.
7. Press the Confirmation key **1** to validate the weight. The display and symbol stop blinking.
8. Start the cooking process by pressing the Start key **2**.

The following table shows the Special Function F1 programmes, indicating weight intervals, and defrosting and

standing times (in order to ensure the food is of a uniform temperature).

Programm	Food	Weight (g)	Time (min.)	Standing time (min.)
A 01	Soup	200 – 1500	3 – 15	Turn1-2x, keep covers, 1-2 min
A 02	Pre-prepared dishes dense food	200 – 1500	3 – 20	Turn1-2x, keep covers, 1-2 min
A 03	Pre-prepared dishes e.g. goulash	200 – 1500	3 – 18	Turn1-2x, keep covers, 1-2 min
A 04	Vegetables	200 – 1500	2,6 – 14	Turn1-2x, keep covers, 1-2 min

**Important Notes:**

1. Always use dishes for use in the microwave oven and a lid or cover to avoid loss of liquids.
2. Stir or mix the foods several times during heating, especially when the oven emits a beep and the display is flashing as follows: *turn*.
3. The time required to heat the food will depend on its initial temperature. Food taken straight from the fridge will take longer to heat up than food that is at room temperature. If the food

temperature is not what is wanted, select a greater or lesser weight next time you heat up the food.

4. After heating, stir the food or shake the container and then leave the food to stand for some time to allow the temperature to become uniform throughout the food.

⚠ Warning! After heating the container may be very hot. Although microwaves do not heat up most containers, these may heat up through heat transmission from food.

9.2. Special Function B: Cooking

Use this function to cook fresh food.



1. Select the Special function F2 with the Function selection keys **6**.
2. Select the Program with Parameter selection keys **3**. The Duration and Clock symbols and the display start blinking.
3. Set the program with the Plus and Minus keys **4** (refer to the table below).
4. Press the Confirmation key **1** to validate the program. The display and symbols stop blinking.
5. Select the Weight with Parameter selection keys **3**. The Weight symbol and display start blinking.
6. Set the weight with the Plus and Minus keys **4**.
7. Press the Confirmation key **1** to validate the weight. The display and symbol stop blinking.
8. Start the cooking process by pressing the Start key **2**.

The following table shows the Special Function F2 programmes, indicating weight intervals, and defrosting and

standing times (in order to ensure the food is of a uniform temperature).

Programm	Food	Weight (g)	Time (Min.)	Note
b 01	Potatoes	200 – 1000	4 – 17	Turn 1 – 2 x keep covered
b 02	Vegetables	200 – 1000	4 – 15	Turn 1 – 2 x keep covered
b 03	Rice	200 – 500	13 – 20	One part rice, two parts water, keep covered
b 04	Fish	200 – 1000	4 – 13	Keep covered

Important Note:

1. Always use dishes for use in the microwave oven and a lid or cover to avoid loss of liquids.
2. Stir or mix the foods several times during heating, especially when the oven emits a beep and the display is flashing as follows *turn*.

Warning! After heating, the container may be very hot. Although microwaves do not heat up most containers, these may heat up through heat transmission from food.

Preparation instructions:

1. **Fish pieces** – Add 1 to 3 soup spoons of water or lemon juice.
2. **Rice** – Add water equivalent to twice or three times the quantity of rice.
3. **Unpeeled potatoes** – Use potatoes of the same size. Wash them and prick the skin several times. Do not add water.
4. **Peeled potatoes and Fresh vegetables** – Cut into pieces of the same size. Add a soup spoon of water for every 100 g of vegetables, and salt to taste.

9.3. Special Function C: Defrosting & Toasting

Use this function to cook and toast various types of food.



1. Select the Special function F3 with the Function selection keys **6**.
2. Select the Program with Parameter selection keys **3**. The Duration and Clock symbols and the display start blinking.
3. Set the program with the Plus and Minus keys **4** (refer to the table below).
4. Press the Confirmation key **1** to validate the program. The display and symbols stop blinking.
5. Select the Weight with Parameter selection keys **3**. The Weight symbol and display start blinking.
6. Set the weight with the Plus and Minus keys **4**.
7. Press the Confirmation key **1** to validate the weight. The display and symbol stop blinking.
8. Start the cooking process by pressing the Start key **2**.

The following table shows the Special Function P3 programmes, indicating weight intervals, and defrosting and


standing times (in order to ensure the food is of a uniform temperature).

Programm	Food	Weight (g)	Time (Min.)	Note
C 01	Pizza	300 – 550	3 – 9	Preheat the baking pan
C 02	Deep frozen food	400 – 1000	8 – 14	Turn 2 x, keep covered
C 03	Potato dishes, frozen	200 – 450	10 – 12	Turn 1 x

Important Note:

Always use dishes for use in the microwave oven and a lid or cover to avoid loss of liquids. Stir or mix the foods several times during heating, especially when the oven emits a beep and the display is flashing as follows:

turn

 **Warning!** After heating, the container may be very hot. Although microwaves do not heat up most

containers, these may heat up through heat transmission from food.

Preparation instructions:

1. Frozen pizza – Use pre-cooked frozen pizzas and pizzas-rolls.
2. Deep-frozen food – Use lasagne, cannelloni, prawn soufflé, all frozen. Keep covered.
3. Potato dishes, frozen – Chips, potato croquettes and fried potatoes must be suitable for preparation in the oven.

10. WHEN THE OVEN IS WORKING...

10.1. Interrupting a cooking cycle

In both cases:

1. Microwave emission is stopped immediately.
2. The grill is de-activated but is still very hot. Danger of burning!
3. The timer stops and the display shows the remaining amount of operating time.

If you wish, at this time you can:

1. Turn or stir the food to ensure it will be evenly cooked
2. Change the process parameters,
3. Cancel the process by pressing the Cancel key.
4. To restart the process, close the door and press the Start key.

10.2. Altering parameters

The operating parameters (time, power, temperature) can be altered when the oven is operating or when the cooking process has been interrupted by proceeding as follows:

1. Select the parameter to be change with the Parameter selection keys. The respective symbol and the display start blinking.
2. Set the desired value with the Plus and Minus keys.
3. Press the Confirmation key or wait 3 seconds to validate the new parameter value. The display and symbols stop blinking.

10.3. Cancelling a cooking cycle

If you wish to cancel the cooking process, press the Cancel key twice. You will then hear a beep and the time will appear on the display.

10.4. End of a cooking cycle

At the end of the process you will hear three beeps and the display will show the word "End".

The beeps are repeated every 30 seconds until the door is opened or the Cancel key is pressed.

11. DEFROSTING

The table below shows different defrosting and standing times (in order to ensure the food temperature is

evenly distributed) for different types and weights of food, plus recommendations.

Food	Weight (g)	Defrosting time (min.)	Standing time (min.)	Recommendation
Portions of meat, veal, beef, pork	100	2-3	5-10	Turn once
	200	4-5	5-10	Turn once
	500	10-12	10-15	Turn twice
	1000	21-23	20-30	Turn twice
	1500	32-34	20-30	Turn twice
	2000	43-45	25-35	Turn 3 times
Goulash	500	8-10	10-15	Turn twice
	1000	17-19	20-30	Turn 3 times
Minced meat	100	2-4	10-15	Turn twice
	500	10-14	20-30	Turn 3 times
Sausages	200	4-6	10-15	Turn once
	500	9-12	15-20	Turn twice
Poultry (portions)	250	5-6	5-10	Turn once
Chicken	1000	20-24	20-30	Turn twice
Poultry	2500	38-42	25-35	Turn 3 times
Fish fillet	200	4-5	5-10	Turn once
Trout	250	5-6	5-10	Turn once
Prawns	100	2-3	5-10	Turn once
	500	8-11	15-20	Turn twice
Fruit	200	4-5	5-10	Turn once
	300	8-9	5-10	Turn once
	500	11-14	10-20	Turn twice
	200	4-5	5-10	Turn once
Bread	500	10-12	10-15	Turn once
	800	15-17	10-20	Turn twice
	250	8-10	10-15	
Butter	250	8-10	10-15	
Cream cheese	250	6-8	10-15	
Creams	250	7-8	10-15	

General instructions for defrosting

- When defrosting, use only dishes that are appropriate for microwaves (china, glass, suitable plastic).
- The defrost function by weight and the tables refer to the defrosting of raw food.
- The defrosting time depends on the quantity and thickness of the food. When freezing food keep the defrosting process in mind. Distribute the food evenly in the container.
- Distribute the food as best as possible inside the oven. The thickest parts of fish or chicken drumsticks should be turned towards the outside. You can protect the most delicate parts of food with pieces of aluminium foil. **Important:** The aluminium foil must not come into contact with the oven cavity interior as this can cause electrical arcing.

5. Thick portions of food should be turned several times.
6. Distribute the frozen food as evenly as possible since narrow and thin portions defrost more quickly than the thicker and broader parts.
7. Fat-rich foods such as butter, cream cheese and cream should not be completely defrosted. If they are kept at room temperature they will be ready to be served in a few minutes. With ultra-frozen cream, if you find small pieces of ice in it, you should mix these in before serving.
8. Place poultry on an upturned plate so that the meat juices can run off more easily.
9. Bread should be wrapped in a napkin so that it does not become too dry.
10. Turn the food whenever the oven lets out a beep and the display flashes the word: *turn*.
11. Remove frozen food from its wrapping and do not forget to take off any metal twist-tags. For containers that are used to keep frozen food in the freezer and which can also be used for heating and cooking, all you need to do is take off the lid. For all other cases you should put the food into containers that are suitable for microwave use.
12. The liquid resulting from defrosting, principally that from poultry, should be discarded. In no event should such liquids be allowed to come into contact with other foods.
13. Do not forget that by using the defrosting function you need to allow for standing time until the food is completely defrosted.

12. COOKING WITH THE MICROWAVE OVEN

Warning! Read the section "Microwave Safety" before cooking with your microwave.

Follow these recommendations when cooking with your microwave:

1. Before heating or cooking foods with peel or skin (e.g. apples, tomatoes, potatoes, sausages) prick them so that they do not burst. Cut the food up before starting to prepare it.
2. Before using a container or dish make sure that it is suitable for microwave use (see the section on types of overware).
3. When cooking food with very little moisture (e.g. defrosting bread, making popcorn, etc.) evaporation is very quick. The oven then works as if it was empty and the food may burn. The oven and the container may be damaged in such a situation. You should therefore set just the cooking time necessary and you must keep a close eye on the cooking process.
4. It is not possible to heat large quantities of oil (frying) in the microwave.
5. Remove pre-cooked food from the containers they come in since these are not always heat resistant. Follow the food manufacturer's instructions.
6. If you have several containers, such as cups, for example, set them out uniformly on the turntable plate.
7. Do not close plastic bags with metal clips. Use plastic clips instead. Prick the bags several times so that the steam can escape easily.

8. When heating or cooking foods, check that they reach at least a temperature of 70°C.
9. During cooking, steam may form on the oven door window and may start to drip. This situation is normal and may be more noticeable if the room temperature is low. The oven's safe working is not affected by this. After you have finished cooking, clean up the water coming from the condensation.
10. When heating liquids, use containers with a wide opening, so that the steam can evaporate easily.
11. Prepare the foods as per the instructions and keep in mind the cooking times and power levels indicated in the tables.
12. Keep in mind that the figures given are only indicative and can vary depending on the initial state, temperature, moisture and type of food. It is advisable to adjust the times and power levels to each situation. Depending on the exact characteristics of the food you may need to increase or shorten the cooking times or increase or decrease the power levels.

Cooking with microwaves...

1. The greater the amount of food, the longer the cooking time. Keep in mind that:
2. Double the quantity » double the time
3. Half the quantity » half the time
4. The lower the temperature, the longer the cooking time.
5. Foods containing a lot of liquid heat up more quickly.
6. Cooking will be more uniform if the food is evenly distributed on the turntable. If you put dense foods on the outside part of the plate and less dense ones on the centre of the plate, you can heat up different types of food simultaneously.
7. You can open the oven door at any time. When you do this the oven switches off automatically. The microwave will only start working again when you close the door and press the start key.
8. Foods that are covered require less cooking time and retain their characteristics better.
9. The lids used must let microwaves pass through and have small holes that allow steam to escape.

Tables and suggestions – Cooking vegetables

Food	Quantity (g)	Addition of liquids	Power (Watt)	Time (min.)	Standing Time (min.)	Instructions
Cauliflower	500	100ml	800	9-11	2-3	Cut into slices.
Broccoli	300	50ml	800	6-8	2-3	Keep covered
Mushrooms	250	25ml	800	6-8	2-3	Turn once
Peas & carrots	300	100ml	800	7-9	2-3	Cut into chunks or slices. Keep covered
Frozen carrots	250	25ml	800	8-10	2-3	Turn once
Potatoes	250	25ml	800	5-7	2-3	Peel and cut into equal sized pieces. Keep covered Turn once
Paprika	250	25ml	800	5-7	2-3	Cut into chunks or slices. Keep covered
Leek	250	50ml	800	5-7	2-3	Turn once
Frozen Brussel sprouts	300	50ml	800	6-8	2-3	Keep covered Turn once
Sauerkraut	250	25ml	800	8-10	2-3	Keep covered Turn once

Tables and suggestions – Cooking fish

Food	Quantity (g)	Power (Watt)	Time (min.)	Standing Time (min.)	Instructions
Fish fillets	500	600	10-12	3	Cook covered over. Turn after half of cooking time.
Whole fish	800	800 400	2-3 7-9	2-3	Cook covered over. Turn after half of cooking time. You may wish to cover up the small edges of the fish.

13. COOKING WITH THE GRILL

For good results with the grill, use the grid iron supplied with the oven. Fit the grid iron in such a way that it doesn't come into contact with the metal surfaces of the oven cavity since if it does there is a danger of electric arcing which may damage the oven.

IMPORTANT POINTS:

1. When the microwave grill is used for the first time there will be some smoke and a smell coming from the oils used during oven manufacture.
2. The oven door window becomes very hot when the grill is working. **Keep children away.**

3. When the grill is operating, the cavity walls and the grid iron become very hot. You should use oven gloves.
4. If the grill is used for extended period of time it is normal to find that the elements will switch themselves off temporarily due to the safety thermostat.
5. **Important!** When food is to be grilled or cooked in containers you must check that the container in question is suitable for microwave use. See the section on types of ovenware!
6. When the grill is used it is possible that some splashes of fat may go onto the elements and be burnt. This is a normal situation and does not mean there is any kind of operating fault.

After you have finished cooking, clean the interior and the accessories so that cooking remains do not become

encrusted. Tables and suggestions – Grill without microwave

Food	Quantity (g)	Time (min.)	Instructions
Fish			
Bass	800	18-24	Spread lightly with butter. After half of cooking time turn and spread with seasoning.
Sardines/gurnard	6-8 fish.	15-20	
Meat			
Sausages	6-8 units	22-26	Prick after half cooking time and turn.
Frozen hamburgers	3 units	18-20	Prick after half cooking time.
Spare rib (approx. 3 cm thick)	400	25-30	Brush with oil. After half of cooking time, baste and turn.
Others			
Toast	4 units	1½-3	Watch toasting. Turn
Toasted sandwiches	2 units	5-10	Watch toasting.

Heat up the grill beforehand for 2 minutes. Unless indicated otherwise, use the grid iron. Place the grid on a bowl so that the water and the fat can drop. The times shown are merely indicative and can vary as a function of the composition and quantity of the food, as well as the final condition wished for. Fish and meat taste great if, before grilling, you brush them with vegetable oil, spices and herbs and leave to marinate for a few hours. Only add salt after grilling.

Sausages will not burst if you prick them with a fork before grilling. After half the grilling time has passed, check on how the cooking is going and, if necessary, turn the food over or brush it with some oil. The grill is especially suitable for cooking thin portions of meat and fish. Thin portions of meat only need to be turned once, but thicker portions should be turned several times. In the case of fish, you should join the two ends, putting the tail in its mouth, and then put the fish on the grill iron.

Tables and suggestions – Microwave + Grill

The microwave + grill function is ideal for cooking quickly and, at the same time, browning foods. Furthermore, you can also grill and cook cheese covered food.

The microwave and the grill work simultaneously. The microwave cooks and the grill toasts.

Food	Quantity (g)	Dish	Power (Watt)	Time (min.)	Standing time (min.)
Cheese topped pasta	500	Low dish	400	12-17	3-5
Cheese topped potatoes	800	Low dish	600	20-22	3-5
Lasagne	approx. 800	Low dish	600	15-20	3-5
Grilled cream cheese	approx. 500	Low dish	400	18-20	3-5
2 fresh chicken legs (grilled)	200 each	Low dish	400	10-15	3-5
Chicken	approx. 1000	Low and wide dish	400	35-40	3-5
Cheese topped onion soup	2 x 200 g cups	Soup bowls	400	2-4	3-5

Before using a dish in the microwave oven make sure that it is suitable for microwave use. Only use dishes or containers that are suitable for microwave use.

The dish to be used in the combined function must be suitable for microwave and grill use. See the section on types of overware!

Keep in mind that the figures given are merely indicative and can vary as a function of the initial state,

temperature, moisture and type of food.

If the time is not enough to brown the food well, put it under the grill for another 5 or 10 minutes.

Please follow the standing times and don't forget to turn the meat pieces. Unless indicated to the contrary, use the turntable plate for cooking.

The values given in the tables are valid when the oven cavity is cold (it is not necessary to pre-heat the oven).

14. ROASTING AND BAKING

14.1. Table and advices – Preparing meat and cake

Microwave

Food	Quantity (g)	Power (W)	Temperature °C	Time (Min.)	Standing time (min.)
Roast beef	1000-1500	400	200	30-40	20
Pork loin / Cutlet or bones	800-1000	200	180-190	50-60	20
Pork roast					
Whole chicken	1000/1200	400	200	30-40	10
Half chicken	500-1000	400	200	25-35	10
Roast loin of veal	1500/2000	200	180	60-65	20
Beef topside	1500-1800	200	200	80-90	20

Microwave / Baking

Pastry	Power (W)	Temperature °C	Time (Min.)	Standing time (min.)	Instructions
Chocolate– cherry pie	200	200	30	5-10	Turntable, small grill, Springform, Ø 28 cm
Cheesecake with fruit	400	180	40-45	5-10	Turntable, small grill, Springform, Ø 28 cm
Apple pie	200	185	40-45	5-10	Turntable, small grill, Springform, Ø 28 cm
Cheese cake with streusel	400	180	40-50	5-10	Turntable, small grill, Springform, Ø 26 cm
Nuts cake	200	170	30-35	5-10	Turntable, Cake tin

**Advice to roast - bake**

Turn the pieces of meat halfway through the cooking time. When the roasted meat is ready you should let it stand for 20 minutes in the oven with this switched off and closed. This will ensure the juices in the meat are well distributed.

The roasting temperature and time required depends on the type and amount of meat being cooked.

If the weight of the meat to be roasted does not appear on the table choose

the settings for the weight immediately below and extend the cooking times.

Advice on ovenware

Check that the ovenware fits inside the oven.

Hot glass containers should be put on a dry kitchen cloth. If such containers are put on a cold or wet surface the glass may crack and break. Use oven gloves to take the ovenware out of the oven.

Table and advices – baking

Type	Container	Level	Temperature	Time (min.)
Walnut cake	Spring-form type tin	Turntable	170/180	30/35
Fruit tart	Spring-form type tin Ø 28 cm	Turntable, small round grille	150/160	35/45
Ring cake	Spring-form type tin	Turntable	170/190	30/45
Piquant cakes e.g. Pizza made with potatoes	Runde Glasform	Turntable, small round grille	160/180	50/70
Sponge cake	Spring-form type tin Ø 26 cm	Turntable, small round grille	160/170	40/45
Jelly roll	Glass griddle	1	110	35/45
Cherry pie	Glass griddle	1	170/180	35/45

Advice on cake baking ware

The most commonly used type of baking ware is black metal tins. If you are also going to use the microwave, use glass, ceramic or plastic baking ware. These must be able to withstand temperatures up to 250°C. If you use these types of baking ware the cakes are not browned as much.

Advice on how to bake cakes

Different amounts and types of pastry require different temperatures and baking times. Try low settings first of all and then, if necessary, use higher temperatures next time. A lower temperature will result in more uniform baking. Always put the cake tray in the centre of the turntable.

Baking suggestions

How to check if the cake is properly cooked

Start sticking a tooth pick in the highest part of the cake 10 minutes before the end of the baking time. When no dough sticks to the tooth pick the cake is ready.

If the cake is very dark on the outside

Next time choose a lower temperature and let the cake bake for a longer time.

If the cake is very dry

Make small holes in the cake with a tooth pick after baking has finished. Then sprinkle the cake with some fruit juice or alcoholic drink. Next time increase the temperature by about 10° and reduce the baking time.

If the cake does not come free when turned

Let the cake cool down for 5 to 10 minutes after baking and it will come out of the tin more easily. If the cake still does not come free run a knife carefully around the edges. Next time grease the cake tin well.

Advice on saving energy

When you are making more than one cake, it is advisable to bake them in the oven one after the other when the oven is still hot. This lets you reduce the baking time for the second and later cakes.

It is preferable to use dark coloured baking ware - painted or enamelled black – since such baking tins absorb heat better.

When dealing with long baking times, you can switch the oven off 10 minutes before the end of the time and make use of the residual heat to complete the baking.

15. WHAT KIND OF OVENWARE CAN BE USED?

15.1. Microwave function

For the microwave function, keep in mind that microwaves are reflected by metal surfaces. Glass, china, clay, plastic, and paper let microwaves pass.

For this reason, metal pans and dishes or containers with metal parts or decorations cannot be used in the microwave. Glass ware and clay with metallic decoration or content (e.g.

lead crystal) cannot be used in microwave ovens.

The ideal materials for use in microwave ovens are glass, refractory china or clay, or heat resistant plastic. Very thin, fragile glass or china should only be used for short period of times (e.g. heating).

Hot food transmits heat to the dishes which can become very hot. You should, therefore, always use an oven glove!

How to test ovenware you want to use

Put the item you want to use in the oven for 20 seconds at maximum microwave power. After that time, if it is cold and just slightly warm, it is suitable to use. However, if it heats up a lot or causes electric arcing it is not suitable for microwave use.

WARNING! If microwave is used, please make sure there are no inappropriate objects inside of the oven.

15.2. Grill and Hot-Air Functions

In the combined functions, the ovenware used must be suitable for use in both the microwave and the grill.

15.3. Combined Functions

In the combined functions, the ovenware used must be suitable for use in both the microwave and the grill.

15.4. Aluminium containers and foil

Pre-cooked food in aluminium containers or in aluminium foil can be put in the microwave if the following aspects are respected:

Keep in mind the manufacturer's recommendations written on the packaging.

The aluminium containers cannot be more than 3 cm high or come in

contact with the cavity walls (minimum distance 3 cm). Any aluminium lid or top must be removed.

Put the aluminium container directly on top of the turntable plate. If you use the grid iron, put the container on a china plate. Never put the container directly on the grid iron! The cooking time is longer because the microwaves only enter the food from the top. If you have any doubts, it is best to use only dishes suitable for microwave use. Aluminium foil can be used to reflect microwaves during the defrosting process. Delicate food, such as poultry or minced meat, can be protected from excessive heat by covering the respective extremities/edges. Important: aluminium foil cannot come into contact with the cavity walls since this may cause electrical arcing.

15.5. Lids

We recommend you use glass or plastic lids or cling film since:

- This will stop excessive evaporation (mainly during very long cooking times);
- The cooking times are shorter;
- The food does not become dry;
- The aroma is preserved.

The lid should have holes or openings so that no pressure develops. Plastic bags must also be opened. Baby feeding bottles or jars with baby food and similar containers can only be heated without their tops / lids otherwise they can burst.

15.6. Table of Ovenware

The table below gives you a general idea of what type of ovenware is suitable for each situation.

Operating mode Type of ovenware	Microwave		Grill and hot-air function	Combined functions
	Defrosting / heating	Cooking		
Glass and china 1) Home use, not flame resistant, can be used in dish washer.	yes	yes	no	no
Glazed china Flame resistant glass and china	yes	yes	yes	yes
China, stone ware 2) Unglazed or glazed without metallic decorations	yes	yes	no	no
Clay dishes 2) Glazed Unglazed	yes no	yes no	no no	no no
Plastic dishes 2) Heat resistant to 100°C Heat resistant to 250°C	yes yes	no yes	no no	no no
Plastic films 3) Plastic film for food Cellophane	no yes	no yes	no no	no no
Paper, cardboard, parchment 4)	Yes	No	No	No
Metal Aluminium foil Aluminium wrappings 5) Accessories (Rectangular Rack, Rectangular Glass Tray)	yes no no yes	no yes no yes	yes yes yes yes	no yes yes yes

- Without any gold or silver leaf edging; no lead crystal.
- Keep the manufacturer's instructions in mind!
- Do not use metal clips for closing bags. Make holes in the bags. Use the films only to cover the food.
- Do not use paper plates.
- Only shallow aluminium containers without lids/tops. The aluminium cannot come into contact with the cavity walls. Oven Cleaning and Maintenance.

16. OVEN CLEANING AND MAINTENANCE

Cleaning is the only maintenance normally required.

Warning! Your microwave oven should be cleaned regularly, with all food remains being removed. If the microwave is not kept clean its surfaces may deteriorate, reducing the oven's working life and possibly resulting in a dangerous situation.

Warning! Cleaning should be done with the oven power switched off. Take the plug out of the socket or switch off the oven's power circuit.

Do not use aggressive or abrasive cleaning products, scourers that scratch surfaces or sharp objects, since stains may appear.

Do not use high pressure or stream jet cleaning appliances.

16.1. Front Surface

Normally you just need to clean the oven with a damp cloth. If it is very dirty, add a few drops of dishwashing liquid to the cleaning water.

Afterwards, wipe the oven with a dry cloth.

In an oven with an aluminium front, use a glass cleaning product and a soft cloth that does not release any fibres or threads. Wipe from side to side without exerting any pressure on the surface.

Immediately remove lime, fat, starch or egg white stains. Corrosion can occur under these stains. Do not let any water get inside the oven.

16.2. Oven interior

After each time the oven is used, clean the inside walls with a damp cloth since this is the easiest way to remove splashes or spots of food that may have stuck to the inside.

To remove dirt that is harder to shift, use a non-aggressive cleaning product. Do not use oven sprays or other aggressive or abrasive cleaning products.

Always keep the door and the oven front very clean to ensure that the door opens and closes properly.

Make sure water does not enter the microwave ventilation holes.

Regularly take out the turntable plate and the respective support and clean the cavity base, especially after any liquid spillage.

Do not switch on the oven without the turntable and the respective support being in place.

If the oven cavity is very dirty, put a glass of water on the turntable and switch on the microwave oven for 2 or 3 minutes at maximum power. The steam released will soften the dirt

which can then be cleaned easily using a soft cloth.

Unpleasant odours (e.g. after cooking fish) can be eliminated easily. Put a few drops of lemon juice in a cup with water. Put a spoonful of coffee in the cup to avoid the water boiling over. Heat the water for 2 to 3 minutes at maximum microwave power.

16.3. Oven ceiling

If the oven ceiling is dirty, the grill can be lowered to make cleaning easier. To avoid the danger of burning, wait until the grill is cold before lowering it. Proceed as follows:

1. Turn the grill support by 180° (1).
2. Lower the grill gently (2). Do not use excessive force as this may cause damage.
3. After cleaning the ceiling, put the grill (2) back in its place, carrying out the previous operation.

IMPORTANT WARNING: The grill heating element support (1) may fall when it is rotated. If this happens, insert the grill heating element support (1) into the slot in the ceiling of the cavity and rotate it 90° to the grill heating element support (2) position. The mica cover (3) located in the ceiling must always be kept clean. Any food remains that collect on the mica cover can cause damage or provoke sparks.

Do not use abrasive cleaning products or sharp objects.


To avoid any risk, do not remove the mica cover.

The glass lamp cover (4) is located on the oven ceiling and can be removed easily for cleaning. For this you just need to unscrew it and clean it with water and dishwashing liquid.

Accessories

Clean the accessories after each use. If they are very dirty, soak them first of all and then use a brush and sponge. The accessories can be washed in a dish washing machine. Make sure that the turntable plate and the respective support are always clean. Do not switch on the oven

unless the turntable and the respective support are in place.

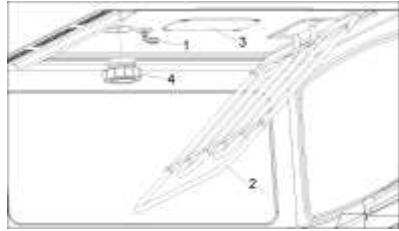

17. WHAT SHOULD I DO IF THE OVEN DOESN'T WORK?

⚠ WARNING! Any type of repair must only be done by a specialised technician. Any repair done by a person not authorised by the manufacturer is dangerous.

You do not need to contact Technical Assistance to resolve the following questions:

- **The display is not showing! Check if:**
 - The time indication has been switched off (see section on Basic Settings).
- **Nothing happens when I press the keys! Check if:**
 - The Safety Block is active (see section on Basic Settings).
- **The oven does not work! Check if:**
 - The plug is correctly fitted in the socket.
 - The oven's power is switched on.
 - The door is completely closed. The door should close with an audible click.
 - There are any foreign bodies between the door and the cavity front.
- **When the oven is operating I can hear some strange noises! Check if:**
 - There is any electrical arcing inside the oven caused by foreign metallic objects (see section on type of ovenware).

- The ovenware is touching the oven walls.
- There are any loose items of cutlery or cooking tools inside the oven.

- **The food doesn't heat up or heats very slowly! Check if:**
 - You have inadvertently used metal ovenware.
 - You have selected the correct operating times and power level.
 - The food you have put inside the oven is a larger amount or colder than you usually put in.
- **The food is too hot, dried out or burnt!**
 - Check if you selected the correct operating time and power level.
- **I hear some noises after the cooking process is finished!**
 - This is not a problem. The cooling fan keeps on working for some time. When the temperature has dropped sufficiently, the fan will switch itself off.
- **The oven switches on but the interior light does not go on!**
 - If all the functions work properly it is probable that the lamp has blown. You can keep on using the oven.


17.1. Substitution of light bulb

To substitute the light bulb, proceed as follows:

1. Disconnect the oven from the power supply. Take the plug out of the socket or switch off the oven's power circuit.
2. Unscrew and remove the glass light cover (1).
3. Remove the halogen light bulb (2). Warning! The bulb may be very hot.
4. Fit a new **G4/12V/10-20W** halogen bulb. Warning! Do not touch the

light bulb surface directly with your fingers because you may damage the bulb. Follow the lamp manufacturer's instructions.

5. Screw the glass light cover into place (1).
6. Connect the oven again to the power supply.

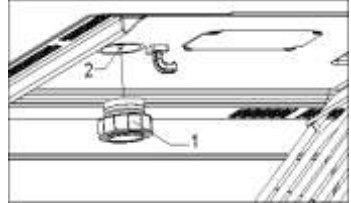

18. TECHNICAL CHARACTERISTICS

18.1. Specifications

AC Voltage	(see rating plate)
Power required	3400 W
Grill power	1500 W
Hot air power	1600W
Microwave output power	1000 W
Microwave frequency	2450 MHz
Exterior dimensions (W×H×D)	595 × 455 × 542 mm
Interior dimensions (W×H×D)	420 × 210 × 390 mm
Oven capacity	32 ltr
Weight	35 kg

19. INSTALLATION INSTRUCTIONS

19.1. Before installation

Check that the input voltage indicated on the rating plate is the same as the voltage of the power outlet you are going to use. The rating plate is located on the front part of the cavity and it is only visible after opening the door.

If required by the National Electrical Code (or Canadian Electrical Code), this appliance must be installed on a separate branch circuit.

Installer – show the owner the location of the circuit breaker or fuse. Mark it for easy reference.

Before installing, turn power OFF at the service panel. Lock service panel to prevent power from being turned ON accidentally.

Be sure your appliance is properly installed and grounded by a qualified technician. Installation, electrical connections and grounding must comply with all applicable codes.

Open the oven door and **take out all the accessories** and remove the packing material.

Do not remove the mica cover on the ceiling of the interior! This cover stops fat and pieces of food damaging the microwave generator.

Warning! The front surface of the oven may be wrapped with a **protective film**. Before using the oven for the first time, carefully remove this film, starting on the inside.

Make sure that the oven is not damaged in any way. Check that the oven door closes correctly and that the interior of the door and the front of the oven opening are not damaged. If you find any damage contact the Technical Assistance Service.

DO NOT USE THE OVEN if the metal conduit is damaged, if the oven does not function correctly or if it has been damaged or dropped. Contact the Technical Assistance Service.

Place the oven on a flat and stable surface. The oven must not be put close to any sources of heat, radios or televisions.

19.2. Electrical supply

Before installing the oven have a qualified electrician verify that your home is provided with adequate electrical service and that the addition of the oven will not overload the branch circuit on which it is to be installed.

A separate three-wire or four-wire single phase, 240 Volt, 60 Hz,

For hook-up of the oven you will need to have an approved junction box installed where it will be easily reached through the front of the cabinet where the oven will be located. The oven has 3 feet of conduit.

Allow two to three feet of slack in the line so that the oven can be moved if servicing is ever necessary.

DO NOT shorten the flexible conduit.

19.3. Wiring requirements

When making the wire connections, use the entire length of the conduit provided (3 feet). The conduit must not be cut.

Before making connections make sure the power is off and read and observe the following:

1. A separate three-wire or four-wire, single phase, 240 Volt, 60 Hz branch circuit is required for the oven.
2. The oven must be connected with Copper or Aluminum wire.
3. In the United States:

Wiring must conform to the National Electrical Code, ANSI/NFPA No. 7 latest edition. You can obtain a copy of the National Electrical Code by writing to: National Fire Protection Association
Batterymarch Park Quincy, MA 02269

In Canada:

Wiring must conform to Canadian Electrical Code C22.1- latest edition. You can obtain a copy of the Canadian Electrical Code by writing to: Canadian Standards Association 178 Rexdale Boulevard Rexdale (Toronto), Ontario, Canada M9W 1R3

4. Wire size (Copper or Aluminum wire) and connections must be suitable for the rating of the appliance as per the National Electrical Code requirements. The flexible armoured cable extending from the oven should be connected directly to the junction box.
5. The junction box should be located so as to allow as much slack as possible between the junction box and the oven so it

can be moved if servicing is ever required.

6. A U.L. listed conduit connector must be provided at each end of the power supply cable.

19.4. Electrical connections

Be sure your appliance is properly installed and grounded by a qualified technician. Ask your dealer to recommend a qualified technician or an authorized repair service.

This appliance is manufactured with a green GROUND wire connected to the oven chassis. After making sure that the power has been turned off, connect the flexible conduit from the oven to the junction box using a U.L. listed conduit connector. The figures and the instructions provided below present the most common way of connecting the ovens.

Your local codes and ordinances, of course, take precedence over these instructions.

WARNING” Risk of Electric Shock, frame grounded to neutral of appliance through a link.

Grounding through the neutral conductor is prohibited for new branch-circuit installations (1996 NEC); mobile homes; and recreational vehicles, or in an area where local codes prohibit grounding through the neutral conductor. For installations where grounding through the neutral conductor is prohibited:


- Disconnect the ground from the neutral at free end of conduit;
- Use grounding terminal or lead to ground unit; and
- Connect neutral terminal or lead to branch circuit neutral in usual manner.

19.5. 3-Wire branch circuit (for US only)

Refer to the following Figure, where local codes allow the connection of GROUND wire from the oven to the branch circuit NEUTRAL wire (gray or white colored wire):

- If local codes permit, connect the green GROUND wire from the oven and the white wire from the oven to the branch circuit NEUTRAL wire (gray or white colored wire).

Connect the red and black leads from the oven to the corresponding leads in the junction box.

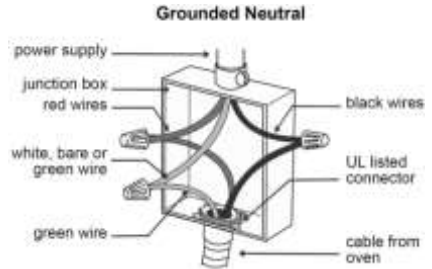


19.6. 4-Wire branch circuit (for US and CANADA)

Refer to the following Figure:

- Disconnect ground from neutral at free end of conduit.
- Connect the green GROUND wire from the oven to the GROUND wire in the junction box (bare or green colored wire).

Connect the red and black leads from the oven to the corresponding leads in the junction box.

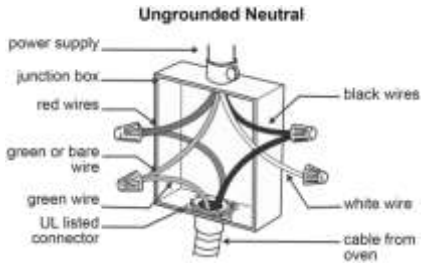


19.7. After installation


The oven only functions when the door is closed correctly.

After the first use, clean the inside of the oven and the accessories, following the cleaning instructions given in the section “Oven cleaning and maintenance”.

Fit the Turntable support in the center of the oven cavity and put the Turntable ring and the Turntable plate on top, making sure they slot in. Whenever you use the microwave, the turntable plate and the respective accessories must be inside and correctly fitted. The turntable plate can rotate in both directions.

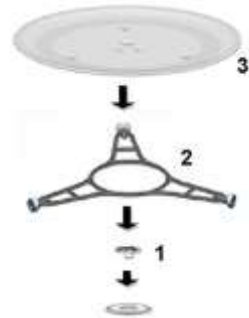

20. INSTALLATION

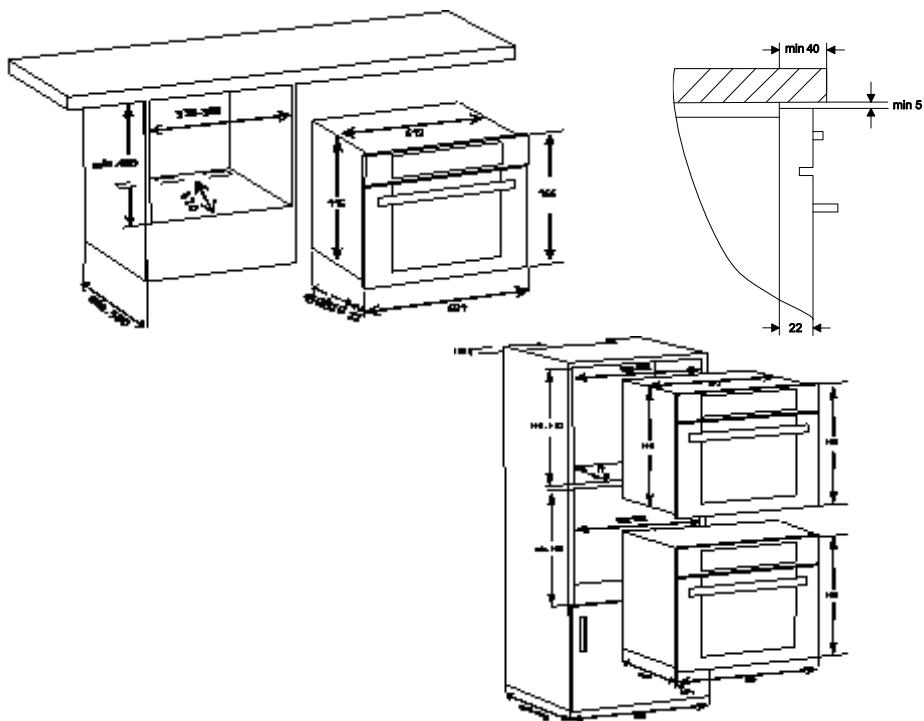

EN

- Push oven completely into the cabinet and centre it.
- Open microwave door and fasten the appliance to the cabinet using the four screws provided. Insert the screws through the front holes.

DISTRIBUTED BY EURO-LINE APPLIANCES INC.
871 Cranberry Court, Oakville, ON, Canada L6L 6J7
1-800-421-6332
www.euro-line-appliances.com

AEG PARTS AND SERVICE | EURO-PARTS, CANADA
1-800-678-8352
www.euro-parts.ca